

General Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For Residential installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- DO NOT INSTALL DAMAGED PRODUCT!
- This fixture is intended to be connected to a properly installed and grounded UL listed junction box.

WARNING:

RISK OF ELECTRICAL SHOCK

- Turn off the electrical power at fuse or circuit breaker box before wiring fixture to power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- Make all electrical and grounded connections in accordance with the National Electrical Code and any applicable local code requirements.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION:

RISK OF INJURY

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.

CAUTION:

RISK OF FIRE

- Keep combustible and other materials that can burn away from luminaire and lamp/lens.
- MIN 90°C SUPPLY CONDUCTORS.

Pictures are for illustration purposes only. Your model may vary.

This instruction manual applies to the LSU4XT8 series.


Page: 1 REV: 1/03/18



Wiring Diagram

▲ WARNING


All units must be individually connected to the AC supply: Select appropriate access point for your installation, remove knockout and feed power leads through hole. Connect the supply wire from the source to the driver.

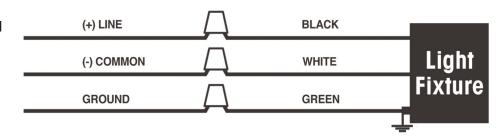

Black = Line White = Neutral Green = Ground

Installation Instructions

Caution: Disconnect connection box from branch circuit before installing

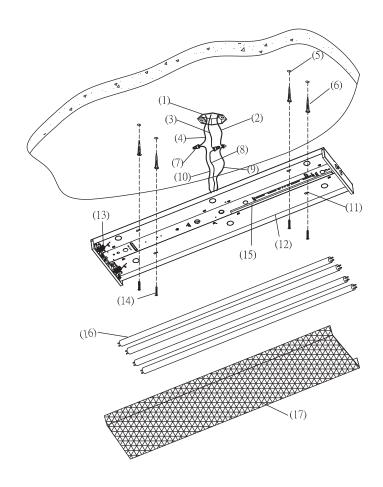


- 1. OUTLET BOX
- 2. HOUSE GROUND WIRE
- 3. WHITE SUPPLY WIRE
- 4. BLACK SUPPLY WIRE
- 5. DRILLED HOLES
- 6. ANCHOR
- 7. WIRE CONNECTORS
- 8. WHITE FIXTURE WIRE
- 9. FIXTURE GROUND WIRE
- 10. BLACK FIXTURE WIRE
- 11. KEY HOLE SLOT
- 12. FIXTURE BODY
- 13. SOCKET
- 14. ANCHOR SCREWS
- 15. WIRE COVER
- 16. LED LAMP
- 17. ACRYLIC LENS

MaxLite®

Installation Instructions

Caution: Disconnect connection box from branch circuit before installing

 1. Take the fixture out of the box. Remove the acrylic lens (17) from the fixture and place aside on a flat surface to avoid damage to the lens. To remove the lens, please refer to the label stuck on the end cap. Pull this end cap outward and then remove the acrylic lens from the fixture. (See Figure 1).

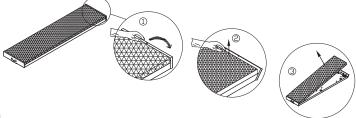


2. Position your fixture over the Outlet Box (1). Mark the location of the four Keyhole Slots (11) located on the Fixture Body (12). Be sure to mark only the narrow parts of the Keyhole Slots (11). Remove the Fixture Body (12) from the ceiling. Drill the four holes using the appropriately sized drill bit. Insert the provided Ceiling Anchors (6) into the holes.

Fig. 1

- 3. Make the wiring connections: connect the House Ground Wire (2) to the Fixture Ground Wire (9) using Wire Connector (7) (not provided); connect the White Supply Wire (3) to the White Fixture Wire (8); connect Black Supply Wire (4) to the Black Fixture Wire (10) using Wire Connectors (7). Carefully tuck all wires back into the Outlet Box (1).
- **4.** Feed the four Anchor Screws (14) through the narrow part of the Keyhole Slots (11). Tighten the Anchor Screws (14) into the Ceiling Anchors (6) until the Fixture Body (12) is flush with the ceiling.
- **5.** Install the LED LAMP (16) into the Sockets (13). Please follow the wattage label located on the fixture body. Do not exceed the recommend wattage.
- 6. To install the lens, carefully slide the lens to the end cap which is fixed making sure the lens is way to the end of the end cap. Pull the other end cap which is moveable outward and put the lens down. Then the lens will be hold by the end cap.

IMPORTANT WARNING:

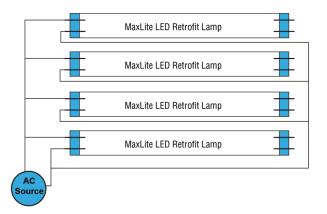

Note: These fixtures are for use only with lamps wired per the above example. Serious risk of electrocution, or fire if non-compatible lamp is installed.

Caution – Replace only with MaxLite LxxT8SE4xx lamps Visit www.MaxLite.com for ordering info

Page: 3 REV: 1/03/18



Page: 4

REV: 1/03/18

Warranty Information

MaxLite Inc. warrants its products for a minimum period of **FIVE (5)** years from the date of original purchase from MaxLite or its authorized distributor/dealer (the "Warranty Period"), as follows: If a Product fails to operate during the Warranty Period as a result of defects in materials or workmanship, MaxLite will, at its option, repair it, replace it with the same or like Product.

Please refer to Maxlite's website (at http://maxlite.com/resources/warranties) for the complete terms and conditions of our warranty.

Limitation of Liability

THE FOREGOING WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF MAXLITE SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL MAXLITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, DECREASE IN THE LIGHT OUTPUT OF THE LAMP, AND/OR DETERIORATION IN THE LAMP'S PERFORMANCE, WHETHER OR NOT MAXLITE HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL MAXLITE'S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT. WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DO NOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; MAXLITE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, this limitation may not apply to you.