

## RUBBER




### Self-Stick Weatherseal

For best results, ensure surfaces are completely dry and free of dust, grime or grease. Install while temperatures are roughly between 40° & 90° F (5°-32° C).

**Installation:** Unwind approximately 12" to start. Press adhesive side of tape firmly onto window or door frame. Leave backing paper on tape to prevent any stretching. Apply around door or window as needed and cut excess with scissors or razor. Remove backing paper.

**Windows:** Apply on upper and lower window sashes between window and window sill.

**Doors:** Apply to door stop molding across the top and down latch side. On hinge side, apply to door frame next to molding.

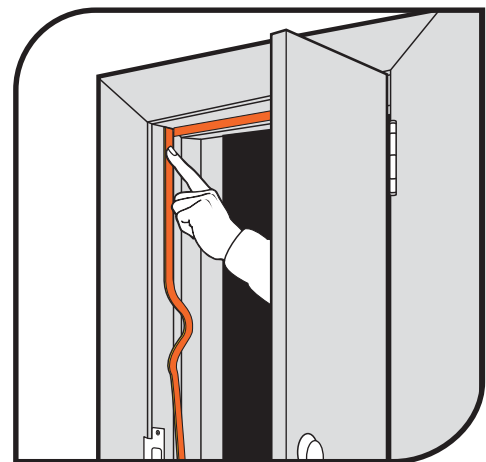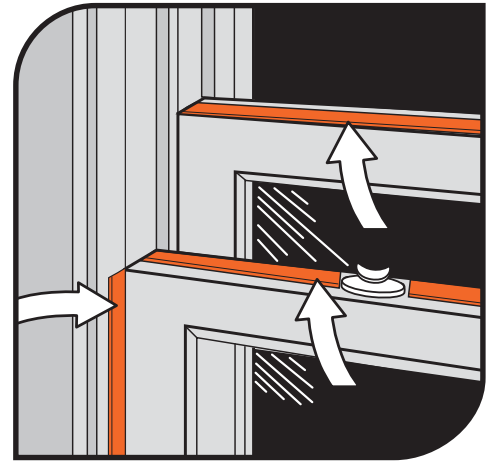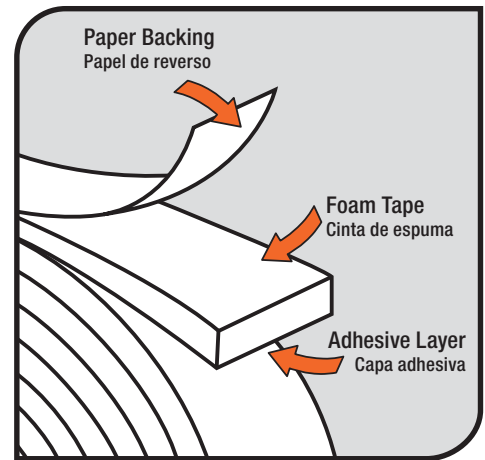

## Burlete autoadhesivo

### ESPUMA DE GOMA

Para mejor resultado, asegúrese que las superficies estén secas y libre de polvo, sucio o grasa. Instále cuando las temperaturas estén alrededor de 40° & 90° F (5°-32° C).

**Instalación:** Desenvuelva aprox. 12" para comenzar. Presione el lado adhesivo del burlete firmemente contra el marco de la ventana o puerta. Deje el papel de reverso en el burlete para evitar que se estire. Aplique alrededor de la puerta o ventana según sea necesario y corte el exceso con tijeras o navaja. Quite el papel de reverso.

**Ventanas:** Aplique al marco superior e inferior entre la ventana y la repisa.

**Puertas:** Aplique al molde del marco a lo largo del tope y del lado del herraje. En el lado de los goznes, aplique al marco de la puerta al lado del molde.



Follow Us @FrostKing  
or [www.frostking.com](http://www.frostking.com)



Thermwell Products Co., Inc.  
Mahwah NJ 07430 | Sparks NV 89431

Need help or information  
about any Frost King product?  
Call **1-877-FROST 20**  
3 7 6 7 8

For videos, instructions, hints and tips  
visit [www.frostking.com/instructions](http://www.frostking.com/instructions)